

OEAI LIBRARY OBERKELLER COMPACT SYSTEM

The library is divided into four sections, which are spatially separated from each other and each can be entered through a separate door. The signatures of each inventory are listed on the doors.

Usage



1. Check if the aisles between the shelves are clear and if your section's door is closed.

2. The D button must point upwards.

3. The red light (B) must be lit. If not, check if the emergency button (C) is pressed.

4. Press "Anlage EIN" (A).

5. Immediately after moving the shelves, turn button D to the left and wait until the red light (B) lights up. Then turn button D back up.

When removing a book, please place one of the provided paper placeholders with information on the signature, title, date of borrowing, and name of the borrower in the corresponding location.